

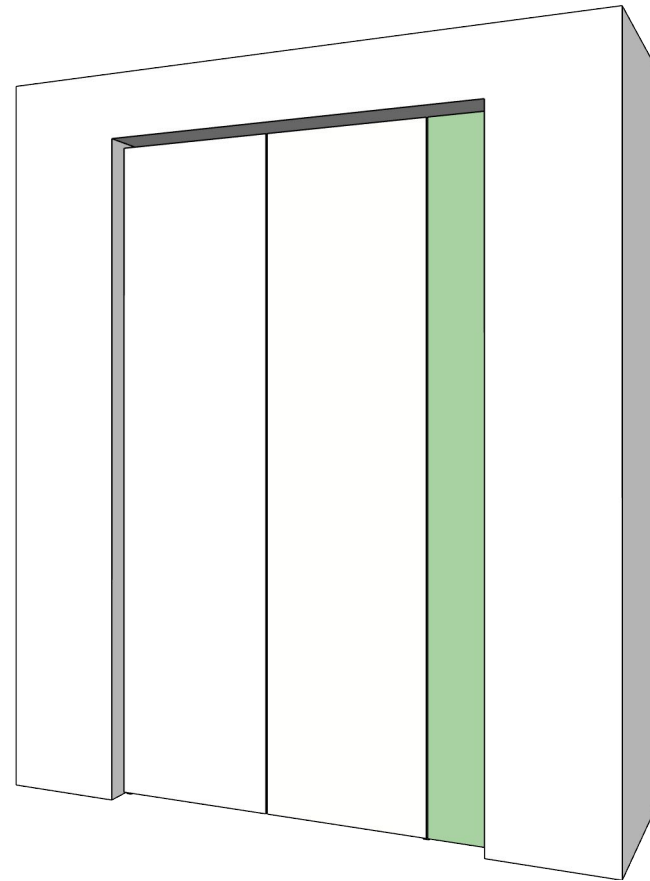


Neatly aligned using a filler piece

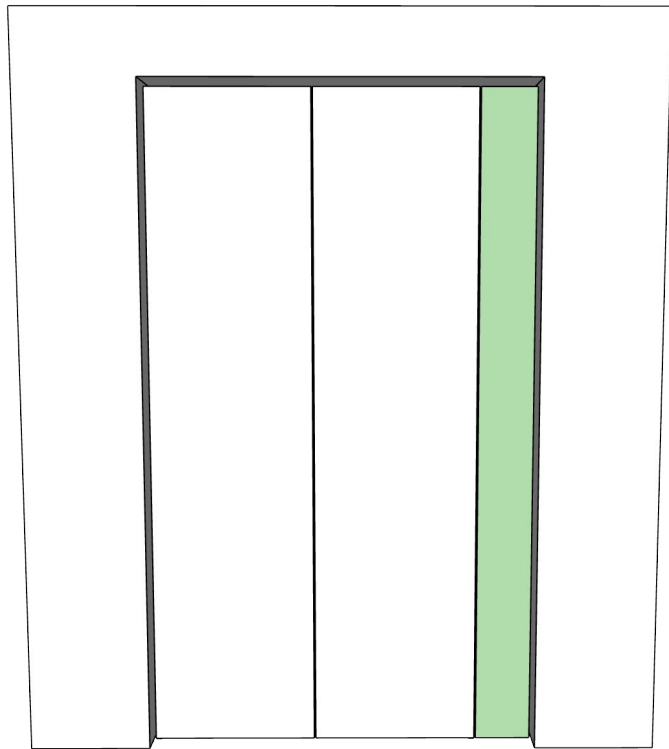

Step-by-step Plan

1. Form an L-shape using the filler piece and the mounting strip. With the help of the mounting brackets and the short 4x16 mm screws.

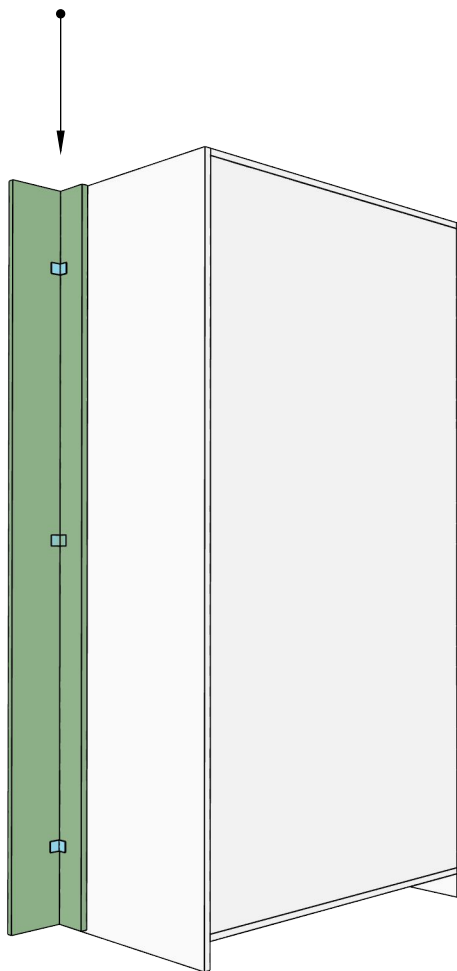

2. Place the L-shape at the same height and align it with the doors. Then secure it from the inside of the cabinet using the longer 4x30 mm screws.

