

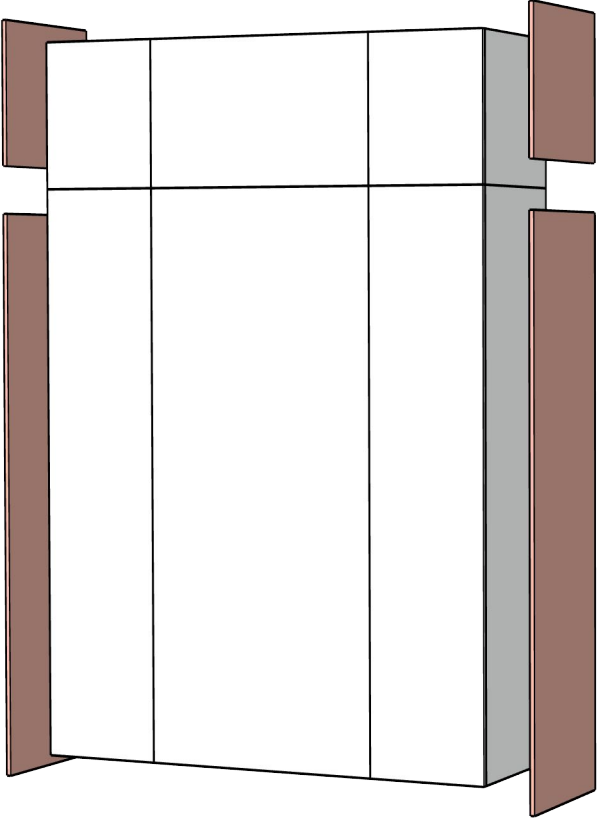


A side panel completes your PAX perfectly

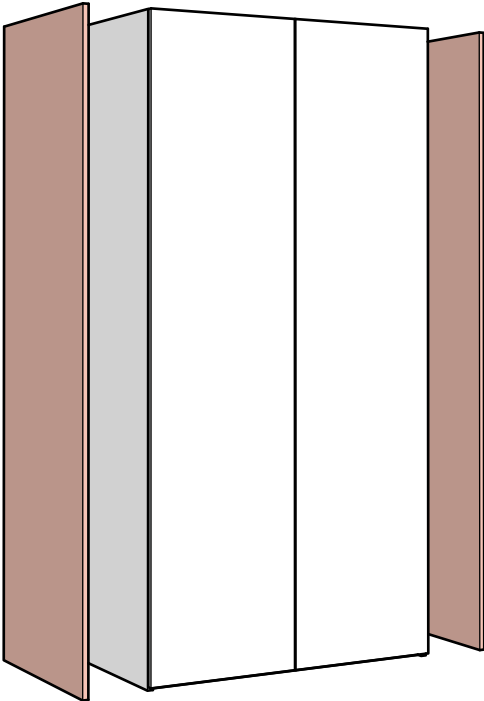

Step-by-step instructions

1. Attach the side panel to the PAX wardrobe. Position the side panel so that it is aligned with the wardrobe and the door. Then screw it in place from the inside using the supplied 4x30mm screws.

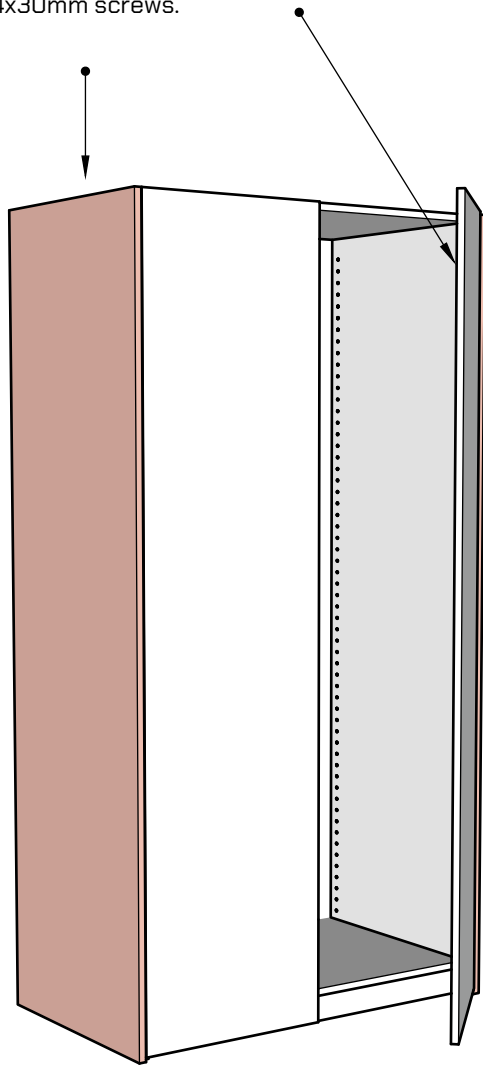

2 If the wardrobe is taller than the length of our base material. [278cm], we divide the doors and the side panel into two sections. The division of the side panels matches the division of the doors on the wardrobe.

