

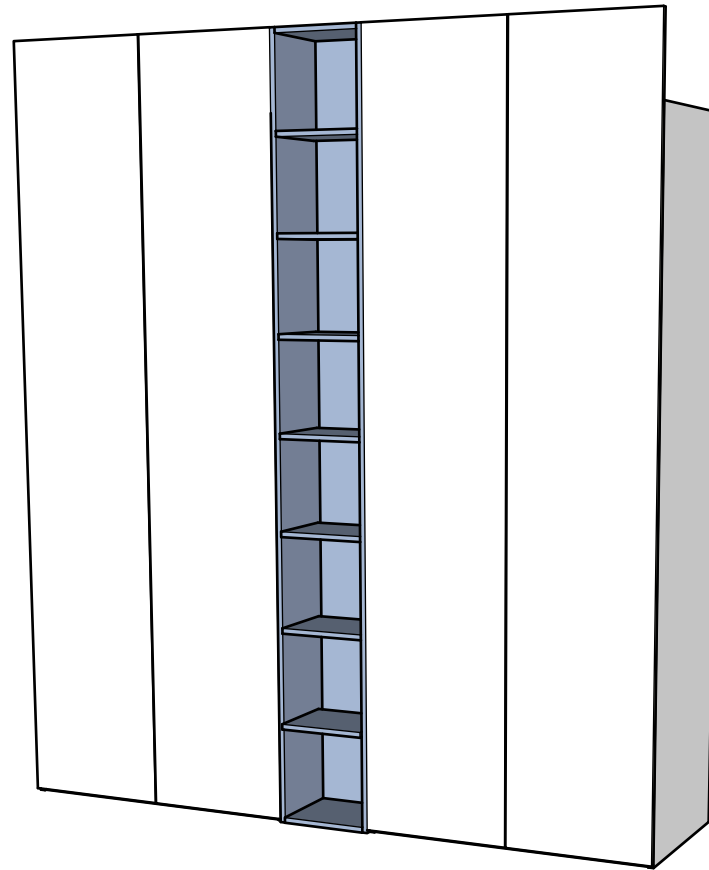
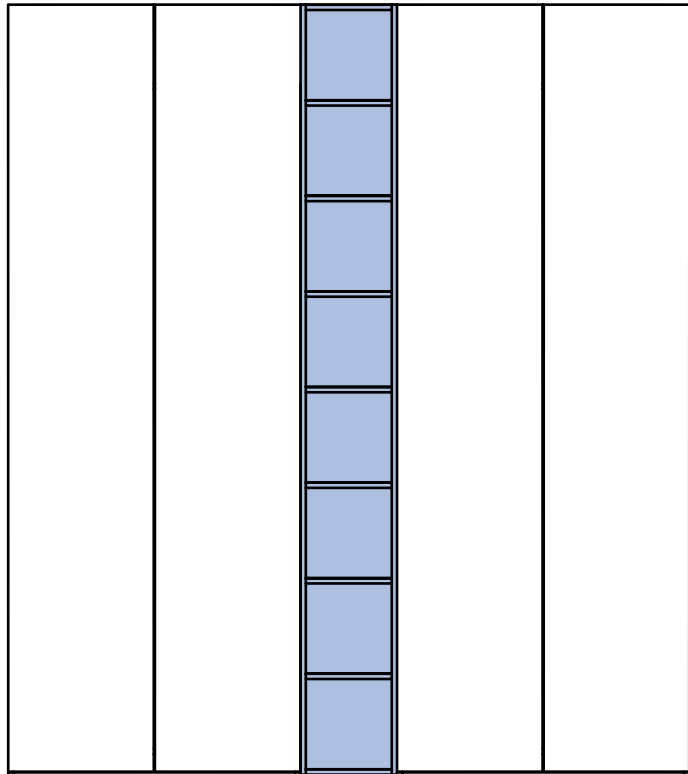


With a VAX, your PAX wardrobe always fits

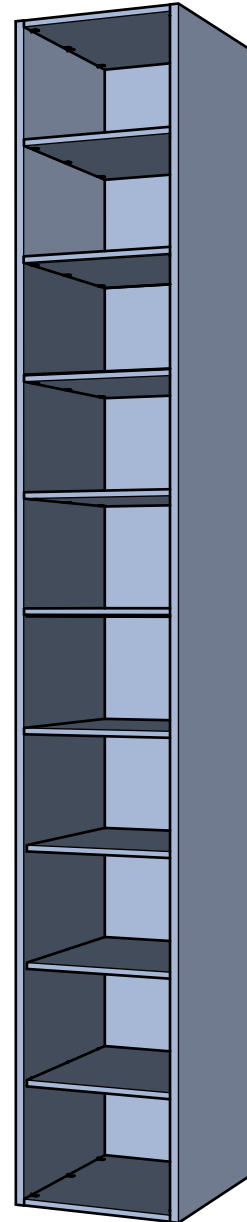


VAX Wardrobe

The flexible compartment cabinet that makes your PAX wardrobe fit your space perfectly.



Panels

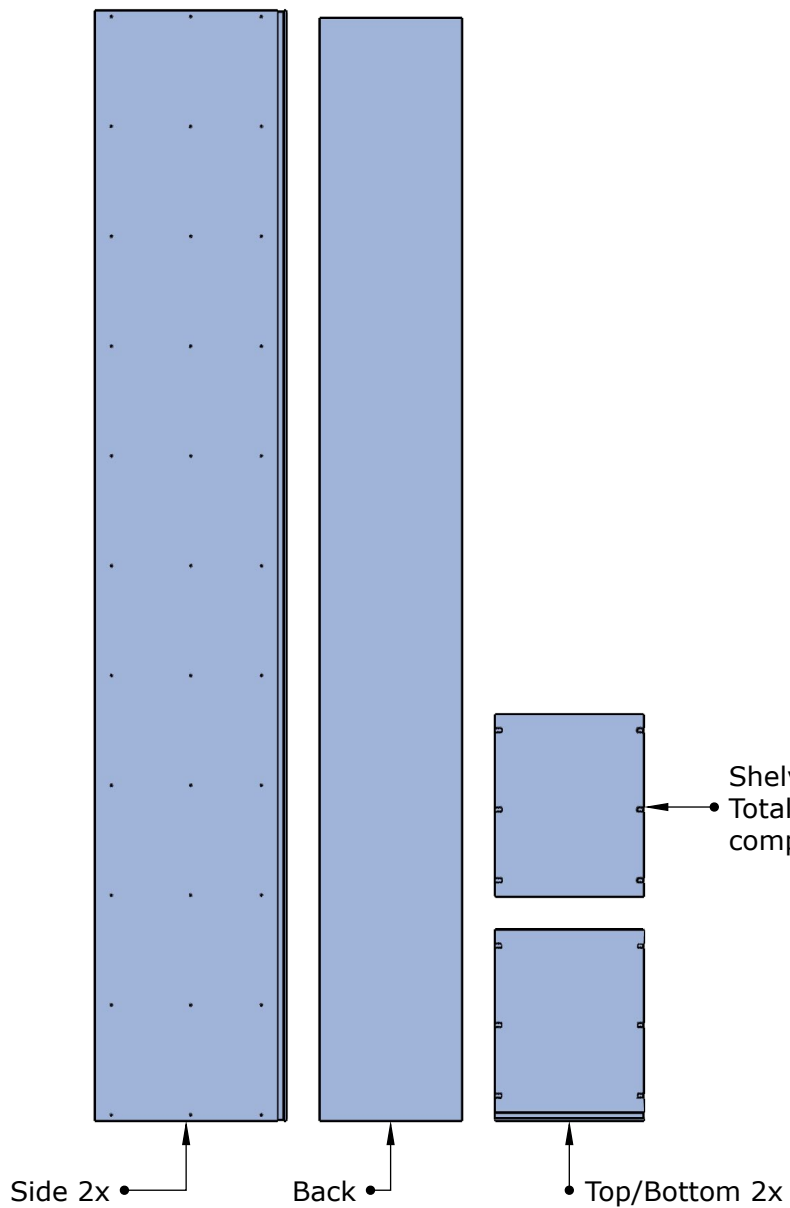

Assembly parts



4/6x Rafix connectors
per top/bottom/shelf

4/6x Rafix screws
per top/bottom/shelf



Step-by-step plan

1. Carefully tap the Rafx connectors into the slots of the top/bottom panels and shelves using a hammer
2. Place one side panel flat on the floor and screw the Rafx screws into the holes using a PZ 2 screwdriver.
3. Place the side panel against the wall and position the bottom panel against it.
4. Connect one Top/Bottom panel to the side panel using the Rafx connector by turning the screw in the Rafx connector a quarter to tighten.
5. Slide the back panel into the groove.
6. Place the top panel and connect it by turning the screw in the Rafx connector a quarter to tighten.
7. Place the other side panel against the wall and slide the cabinet together.
8. Now connect the Rafx connector by turning the screw in the Rafx connector a quarter to tighten.

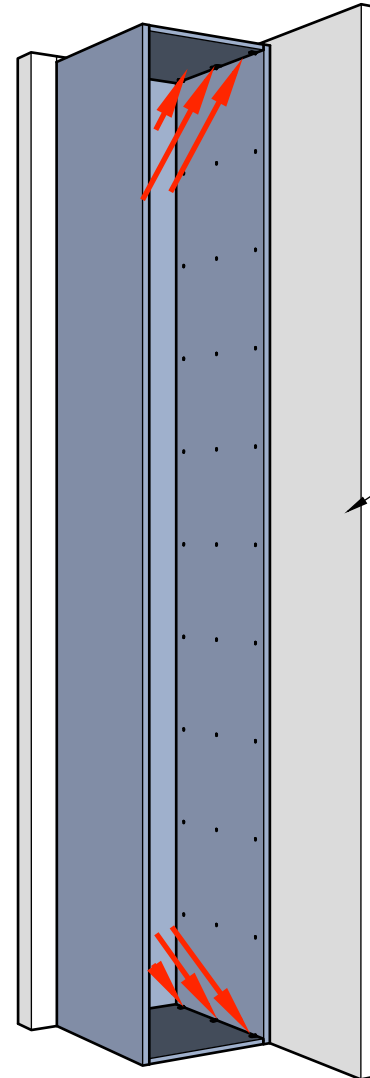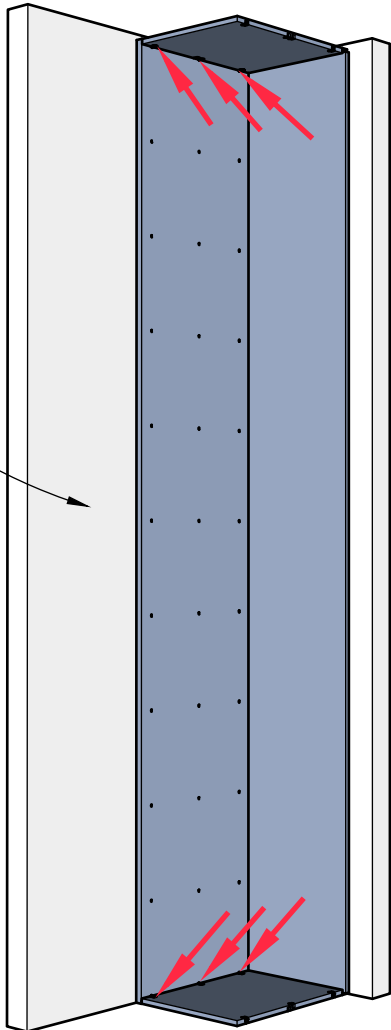

9. Place all shelves over the Rafix screws and secure the Rafix connector by turning the screw in the Rafix connector a quarter to tighten.
10. Place the VAX in its final position.

