
Assembly instructions

BESTÅ VAX

Hanging

The made-to-measure hanging shelf unit for your BESTÅ. In 8 steps you build the cabinet and hang it on the wall. Read these instructions all the way through once before you start.

1. Prepare the side panels
2. Prepare the top and bottom panels
3. Assemble the cabinet
4. Prepare the shelves
5. Fit the shelves
6. Fit the cabinet hangers
7. Fit the wall plates
8. Hang the cabinet

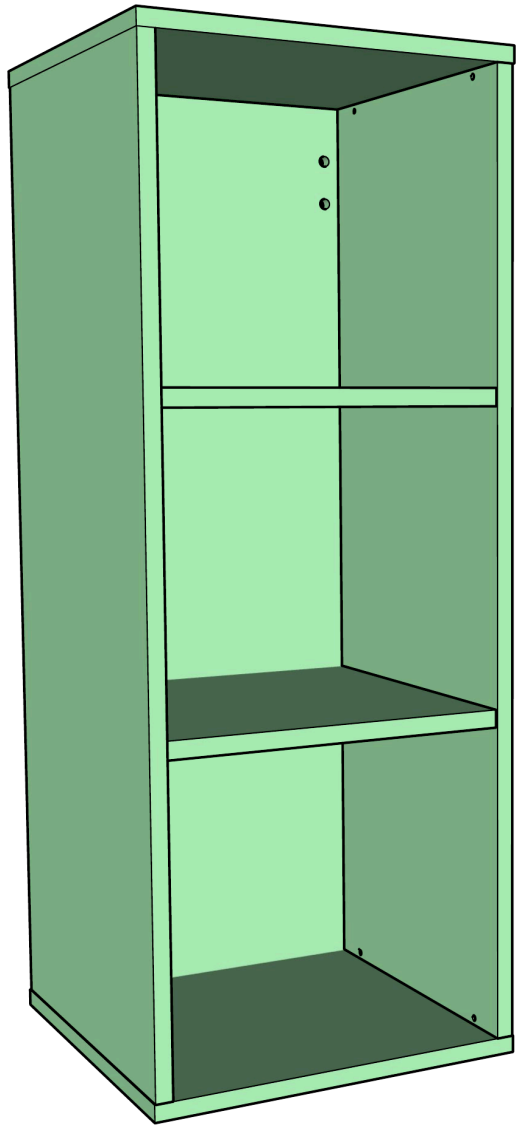

What you'll need

- [ ] Hammer
- [ ] Cross-head screwdriver
- [ ] Tape measure and pencil
- [ ] Spirit level
- [ ] Drill (for the wall)
- [ ] Wall plugs and screws for your wall (not included)

TIP Hang the cabinet in pairs. One person holds it, the other adjusts it.

MODIY

BESTÅ VAX Hanging

BEFORE YOU START

Which panels do you have?

Lay out all the panels and count them. These instructions always use these names.


1 Side panel — 2×
The left and right sides of the cabinet.

2 Top and bottom panel — 2×
The top and the bottom. Both are the same panel.

3 Back panel — 1×
The back of the cabinet.

4 Shelf — Varies
The boards that divide the cabinet into compartments. How many depends on your number of compartments.

SOMETHING MISSING? Don’t start assembling yet. Contact us first via modiy.nl.

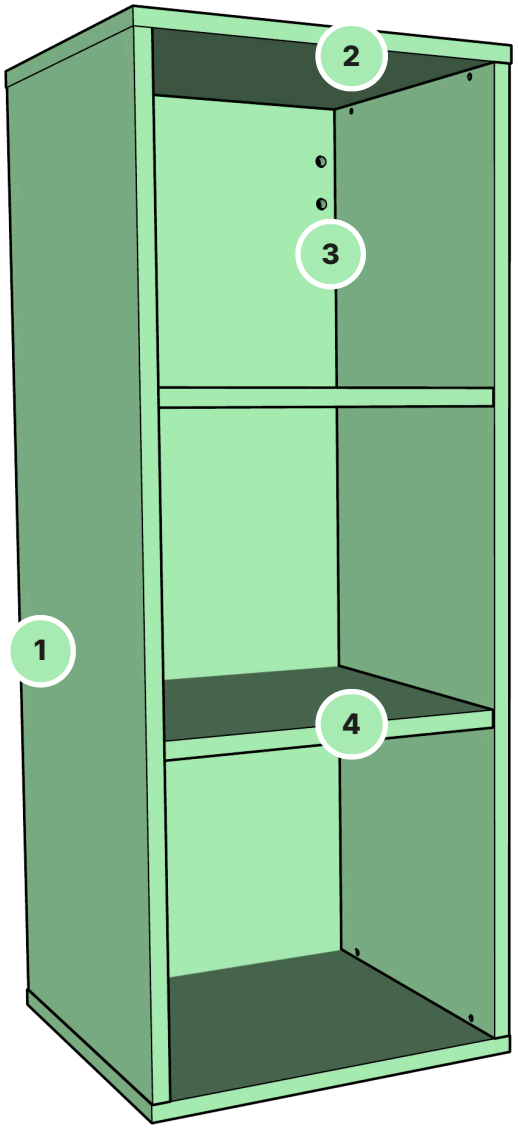

MODIY

BESTÅ VAX Hanging

BEFORE YOU START

Is your assembly kit complete?


Lay out all the parts and count them. Each part shows which step you use it in.



Divario slide — 4 per shelf

Divario part B, with 2 pins

STEP 1 In the side panels



Clamex P14 part A — 8×

With lugs and hex socket

STEP 1 In the side panels



Clamex P14 part B — 8×

Without lugs or hex socket

STEP 2 In the top and bottom panels



Allen key — 1×

For the Clamex connectors


STEP 3 Tightening the cabinet



Divario part A — 4 per shelf

With locking pins

STEP 4 In the shelves

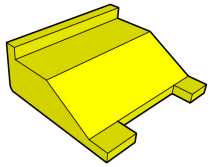

MODIY block — 1×

Assembly aid, remove it when you're done

STEP 4 Fitting the Divarios in the shelves



Cabinet hanging system — 2×

Cabinet hanger with wall plate: 1 for the left, 1 for the right. With 3 screws 4 × 15 mm per hanger.

STEPS 6–8 Hanging the cabinet on the wall

MODIY

BESTÅ VAX Hanging

STEP 1

1 Prepare the side panels

1 Tap in the Divario slides

Gently tap the Divario slides (part B) into the round holes in the side panel with a hammer.


2 Screw in the Clamex connectors

Screw the Clamex connectors **part A** (with lugs and hex socket) into the slots in the edge of the side panel.

IMPORTANT **Check which way round it goes.** The side with the hex socket must face the side with the small hole in the panel.

3 Do this for both side panels

The side panels are now ready.

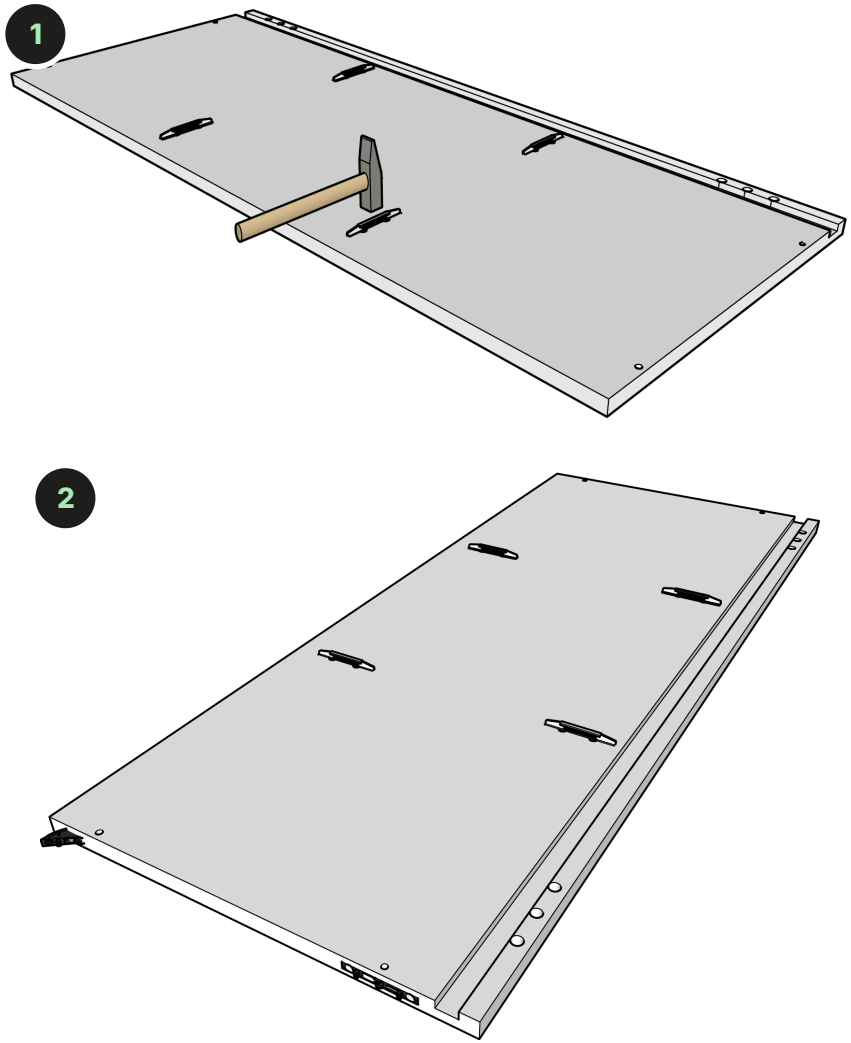

STEP 2

2 Prepare the top and bottom panels

1. **Screw in the Clamex connectors**
   Screw the Clamex connectors **part B** (without lugs or hex socket) into the slots in the edge of the panel.

2. **Do this for both panels**
   The top and bottom panels are now ready.


PART A OR B?



Part A: with lugs and hex socket
(side panels)



Part B: without lugs
(top and bottom panels)

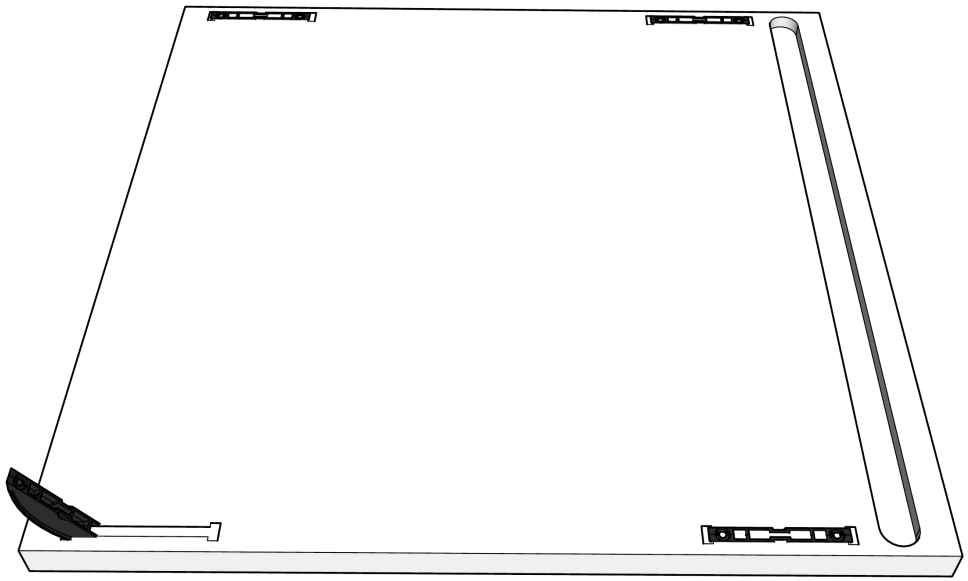


STEP 3


3 Assemble the cabinet


1. **Start with three parts**
   Put together a side panel, a top or bottom panel and the back panel. Tighten the connectors with the Allen key.

2. **Add the second side panel**
   Place the second side panel on the back panel. Fix it to the top or bottom panel with the Allen key.

3. **Close the cabinet**
   Fit the last top or bottom panel and tighten it with the Allen key too.

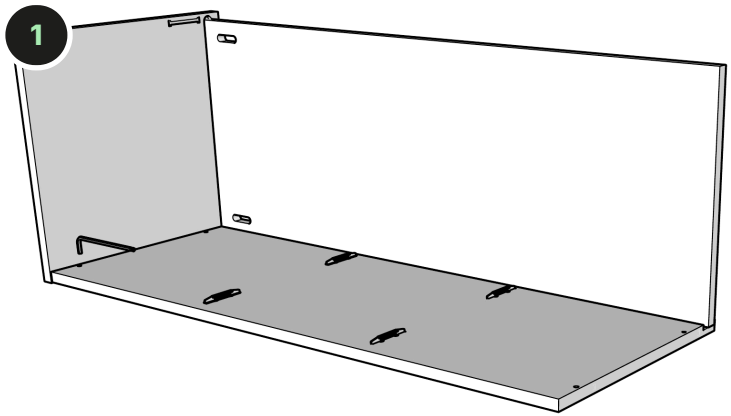

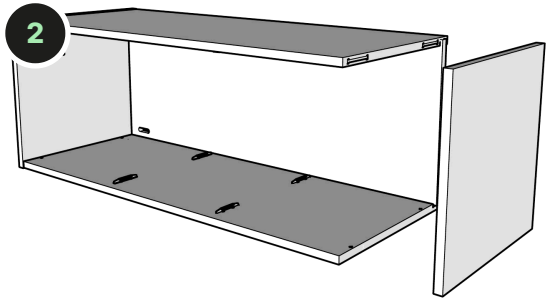

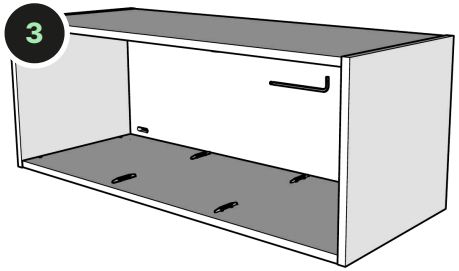

MODIY

BESTÅ VAX Hanging


STEP 4

4 Prepare the shelves

1. **Screw in the Divario**
   Screw a Divario connector (**part A**) into the shelf. Use the MODIY block to do this.

2. **Tap in the locking pins**
   Hold the top of the block parallel to the edge of the shelf. Gently tap in the Divario's locking pins.

3. **Repeat for the other Divarios**
   Remove the block and do the same for the other Divario connectors. Each shelf gets 4.

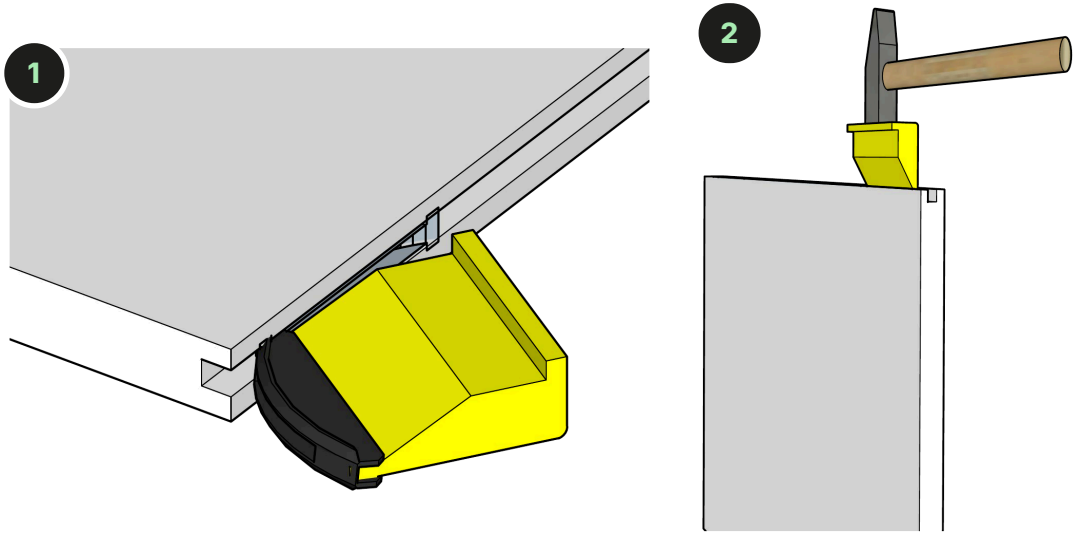


STEP 5


5 Fit the shelves

1. **Lay the cabinet on its back**
   Lay the cabinet down with the back panel on the floor.

2. **Slide in the shelves**
   Slide the shelves over the Divario slides in the side panels.

3. **Stand the cabinet upright**
   The cabinet is now ready to hang.

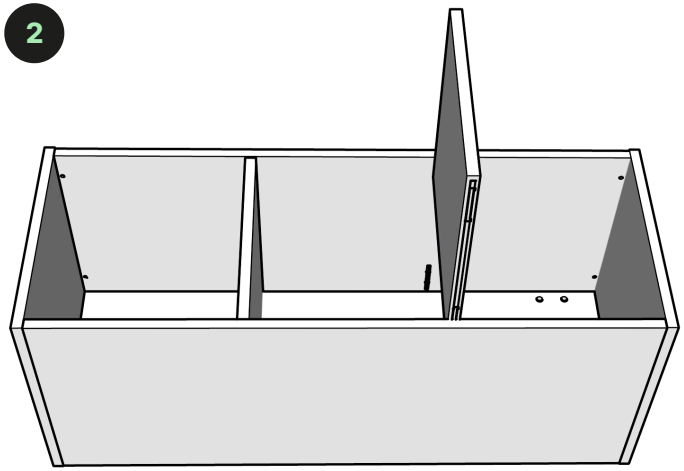

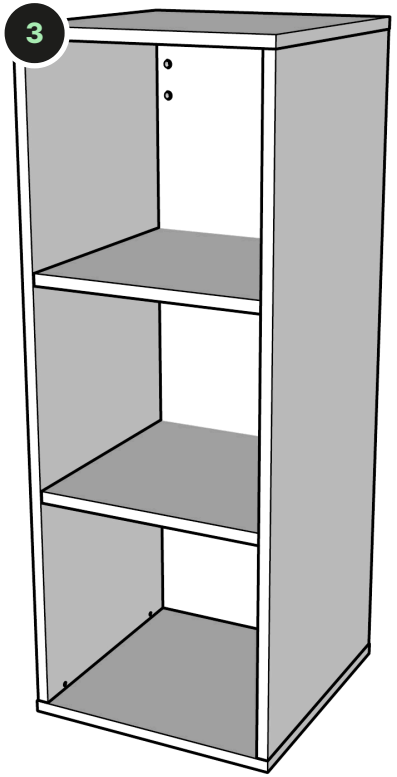

MODIY

BESTÅ VAX Hanging

STEP 6


6 Fit the cabinet hangers

1. **Find the holes**
   At the back of the cabinet, each side panel has **3 holes**. That's where the cabinet hanger goes.

2. **Left and right**
   There is 1 cabinet hanger for the left side and 1 for the right. Make sure you don't mix them up.

3. **Fit the cabinet hanger**
   Press the cabinet hanger into the holes. If it's stiff, gently tap it in with a hammer.

4. **Screw it in place**
   Fix each cabinet hanger with **3 screws** of 4 × 15 mm.

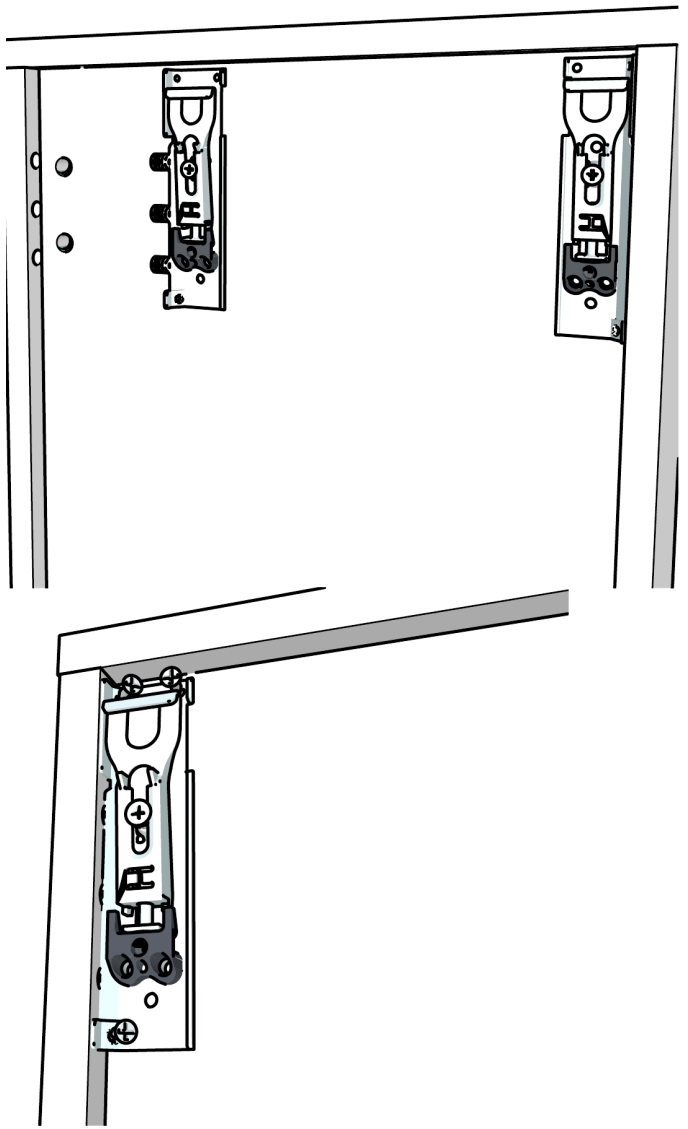

MODIY

BESTÅ VAX Hanging

STEP 7

7 Fit the wall plates

MARKING OUT

1 Mark the top

Decide where the top of the cabinet will be. Draw a horizontal line **57 mm** below it. Use a spirit level.

2 Draw a centre line


Find the centre of the cabinet and draw a vertical line. Also find the centre of the marking board.

3 Position the marking board

Hold the marking board below the line, with its centre on the centre line.

4 Mark the holes

Hold the 2 wall plates against the ends of the board. On each wall plate, mark the centre of the 2 slots.

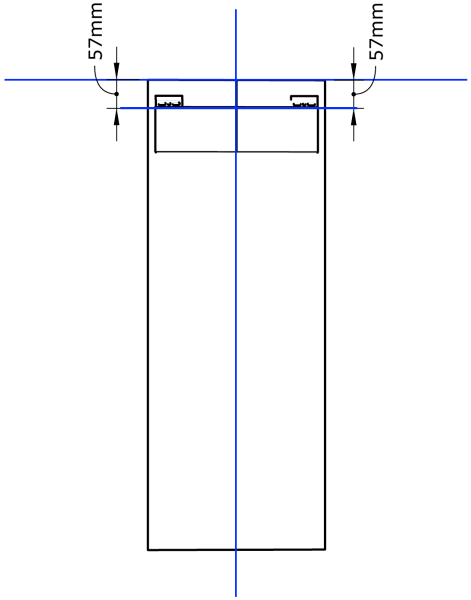


DRILLING AND FIXING


5 Drill the 4 holes

Drill the holes to the size of the wall plugs that suit your wall.

6 Screw the wall plates on

Insert the plugs and screw the wall plates firmly in place. Keep them just inside the ends of the marking board.

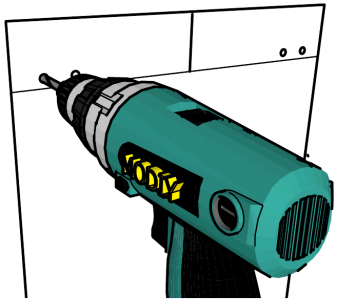

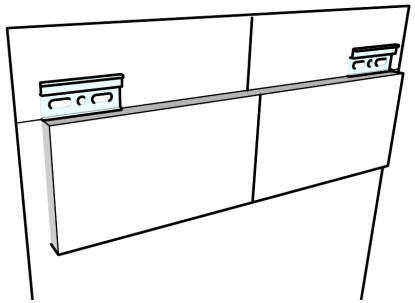

STEP 8

8 Hang the cabinet

1 **Open the cabinet hangers**

Put a screwdriver through the **upper holes** in the back panel. Turn anticlockwise until the cabinet hanger is fully open.

2 **Hang the cabinet**

Hang the cabinet over the wall plates.


3 **Adjust the height**

Turn through the **lower holes** in the back panel. Clockwise moves the cabinet up, anticlockwise moves it down.

4 **Pull the cabinet against the wall**

Turn through the **upper holes** clockwise until the cabinet sits firmly against the wall.

Hole in the back panel	↺ Anticlockwise	↻ Clockwise
Upper hole	Opens the hanger	Pulls the cabinet to the wall
Lower hole	Cabinet down	Cabinet up

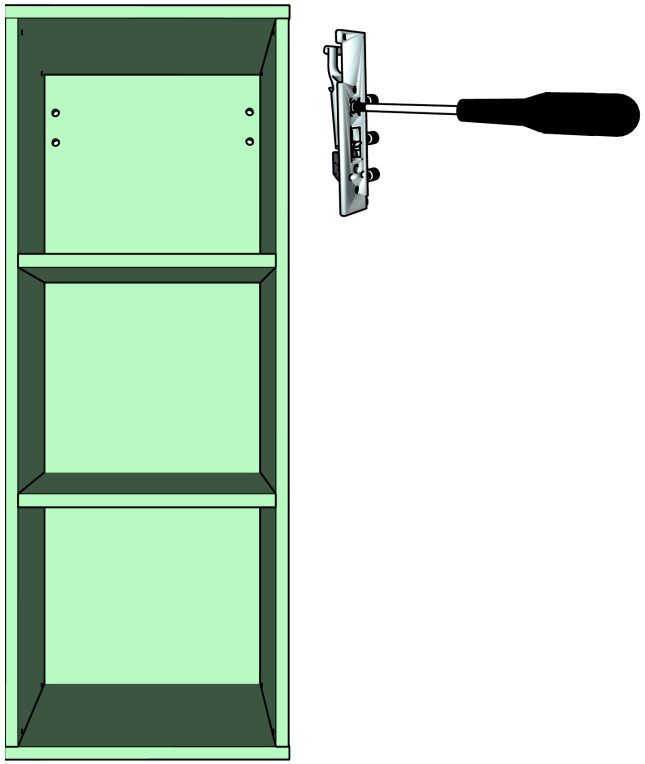

Done! Your VAX is up. Enjoy your new shelf unit!

MODIY

BESTÅ VAX Hanging