Assembly instructions

BESTÅ VAX

Standing


The made-to-measure standing shelf unit for your BESTÅ. In 5 steps you build the cabinet and put it in place. Read these instructions all the way through once before you start.

1. **Prepare the side panels**
2. **Prepare the top and bottom panels**
3. **Assemble the cabinet**
4. **Prepare the shelves**
5. **Fit the shelves**

What you'll need

- [ ] Hammer
- [ ] Blanket or cardboard (to lay the panels on)

TIP Stand the cabinet up with two people. It's large and awkward to lift on your own.

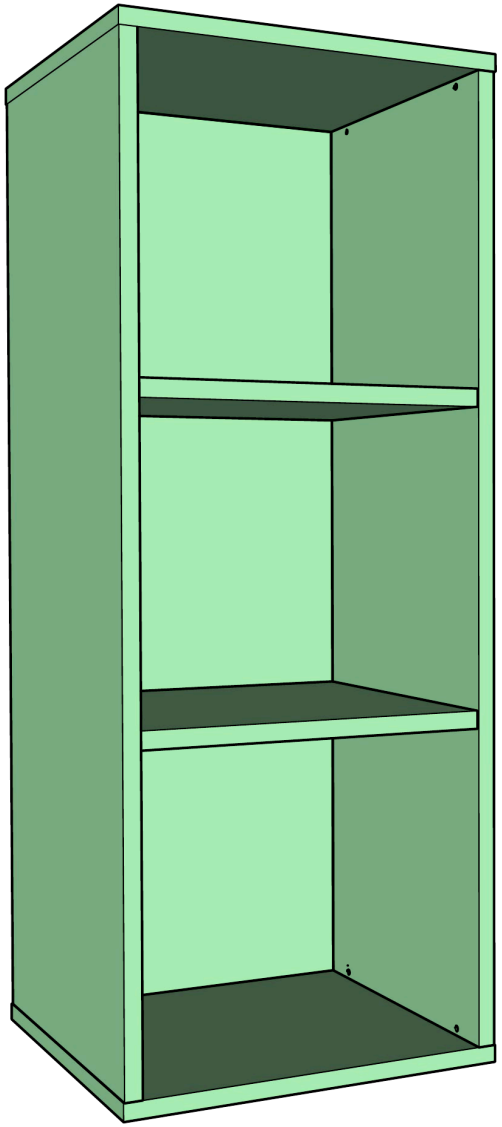

MODIY

BESTÅ VAX Standing

BEFORE YOU START

Which panels do you have?

Lay out all the panels and count them. These instructions always use these names.


1 Side panel — 2×
The left and right sides of the cabinet.

2 Top and bottom panel — 2×
The top and the bottom. Both are the same panel.

3 Back panel — 1×
The back of the cabinet.

4 Shelf — Varies
The boards that divide the cabinet into compartments. How many depends on your number of compartments.

SOMETHING MISSING? Don’t start assembling yet. Contact us first via modiy.nl.

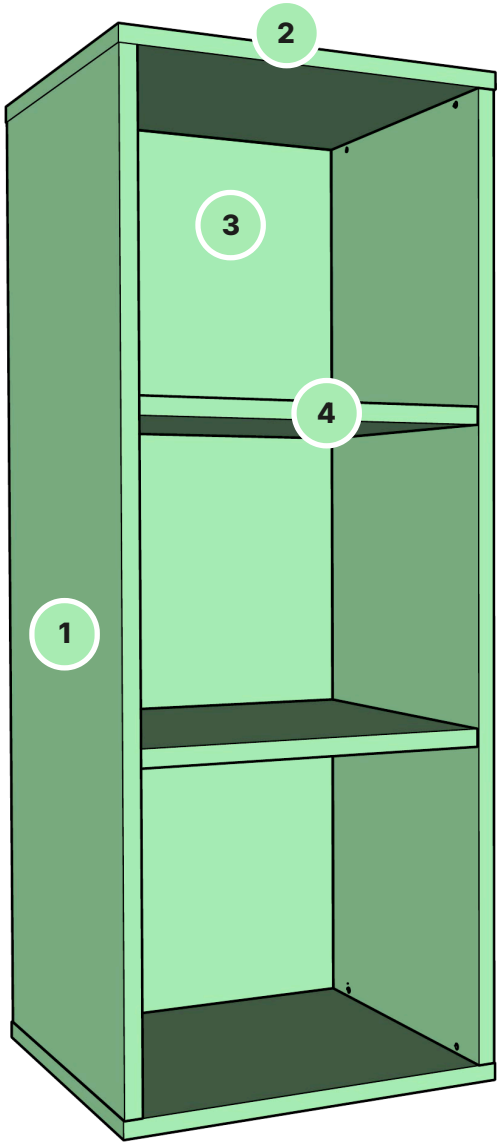

MODIY

BESTÅ VAX Standing

BEFORE YOU START

Is your assembly kit complete?


Lay out all the parts and count them. Each part shows which step you use it in.



Divario slide — **4 per shelf**

Divario part B, with 2 pins

STEP 1 In the side panels



Clamex P14 part A — **8×**

With lugs and hex socket

STEP 1 In the side panels



Clamex P14 part B — **8×**

Without lugs or hex socket

STEP 2 In the top and bottom panels



Allen key — **1×**

For the Clamex connectors


STEP 3 Tightening the cabinet



Divario part A — **4 per shelf**

With locking pins

STEP 4 In the shelves

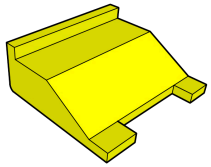

MODIY block — **1×**

Assembly aid, remove it when you're done

STEP 4 Fitting the Divarios in the shelves

MODIY

BESTÅ VAX Standing

STEP 1

1 Prepare the side panels

1 Tap in the Divario slides

Gently tap the Divario slides (part B) into the round holes in the side panel with a hammer.


2 Screw in the Clamex connectors

Screw the Clamex connectors **part A** (with lugs and hex socket) into the slots in the edge of the side panel.

IMPORTANT **Check which way round it goes.**
The side with the hex socket must face the side with the small hole in the panel.

3 Do this for both side panels

The side panels are now ready.

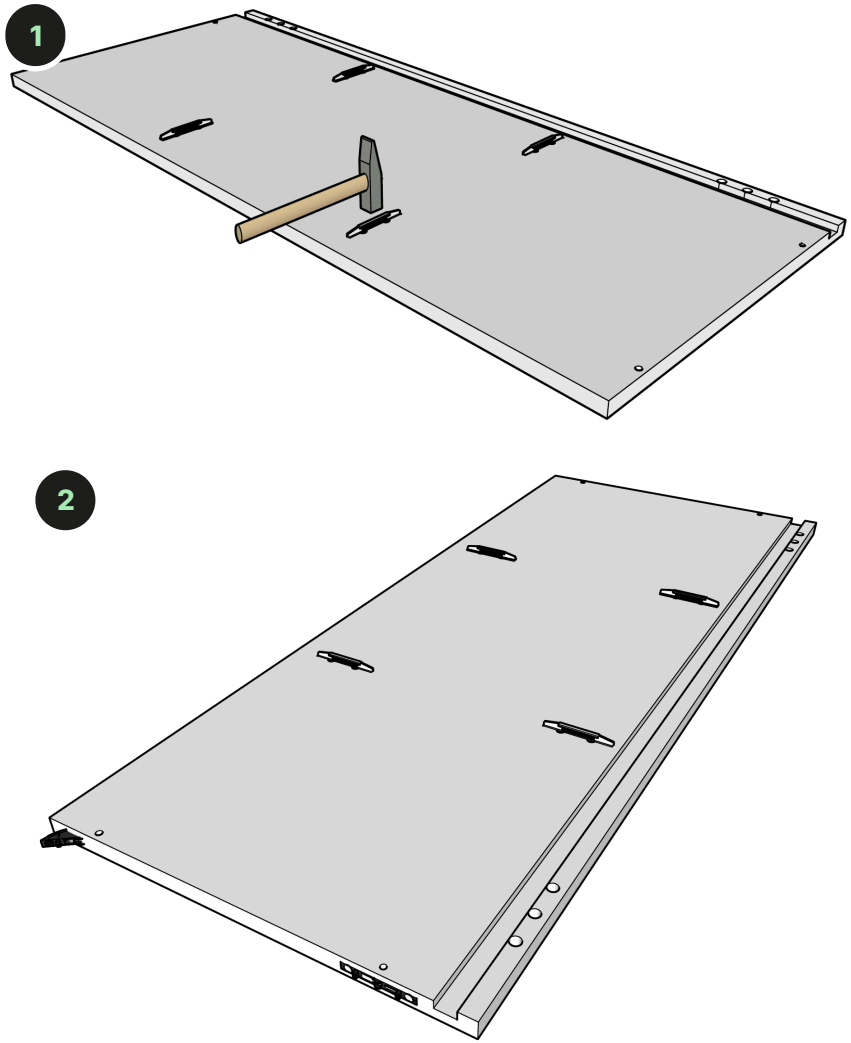

STEP 2

2 Prepare the top and bottom panels

1. **Screw in the Clamex connectors**
   Screw the Clamex connectors **part B** (without lugs or hex socket) into the slots in the edge of the panel.

2. **Do this for both panels**
   The top and bottom panels are now ready.


PART A OR B?



Part A: with lugs and hex socket
(side panels)



Part B: without lugs
(top and bottom panels)

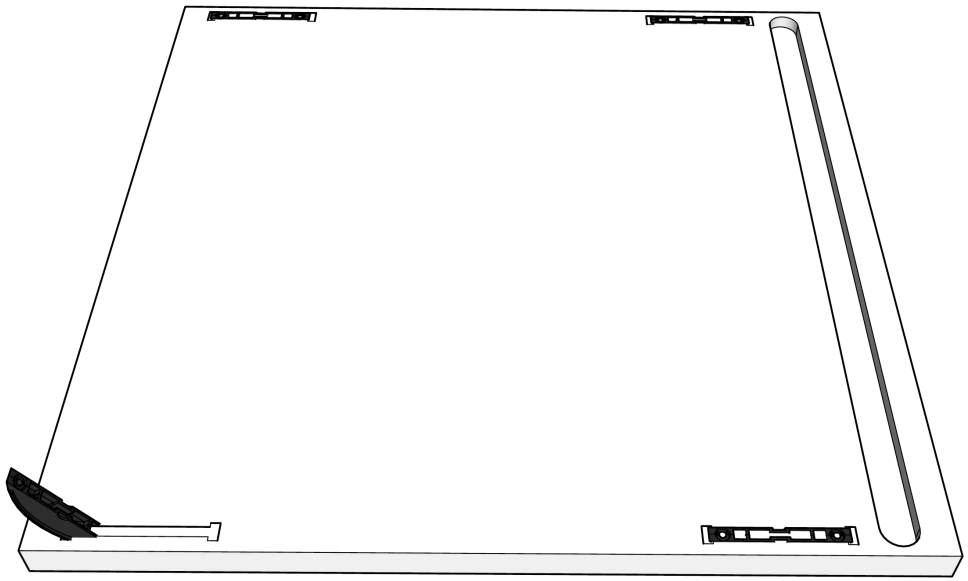


STEP 3


3 Assemble the cabinet


1. **Start with three parts**
   Put together a side panel, a top or bottom panel and the back panel. Tighten the connectors with the Allen key.

2. **Add the second side panel**
   Place the second side panel on the back panel. Fix it to the top or bottom panel with the Allen key.

3. **Close the cabinet**
   Fit the last top or bottom panel and tighten it with the Allen key too.

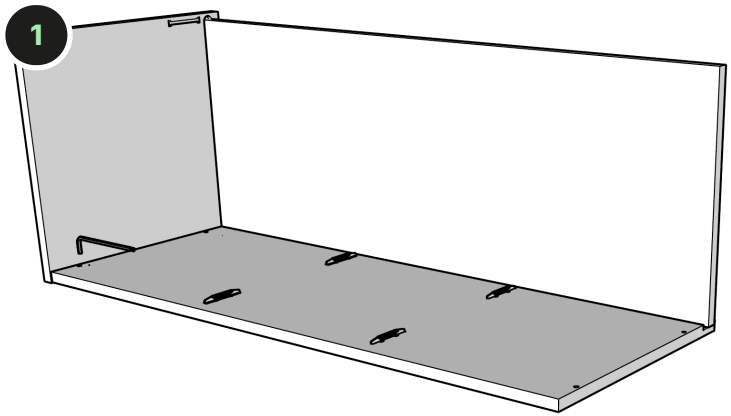

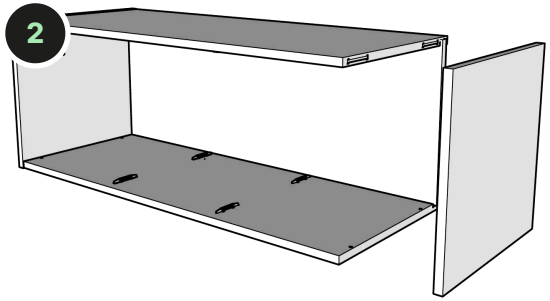

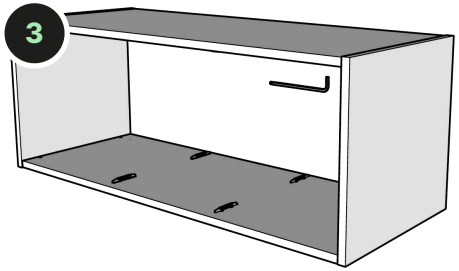

MODIY

BESTÅ VAX Standing


STEP 4

4 Prepare the shelves

1. **Screw in the Divario**
   Screw a Divario connector (**part A**) into the shelf. Use the MODIY block to do this.

2. **Tap in the locking pins**
   Hold the top of the block parallel to the edge of the shelf. Gently tap in the Divario's locking pins.

3. **Repeat for the other Divarios**
   Remove the block and do the same for the other Divario connectors. Each shelf gets 4.

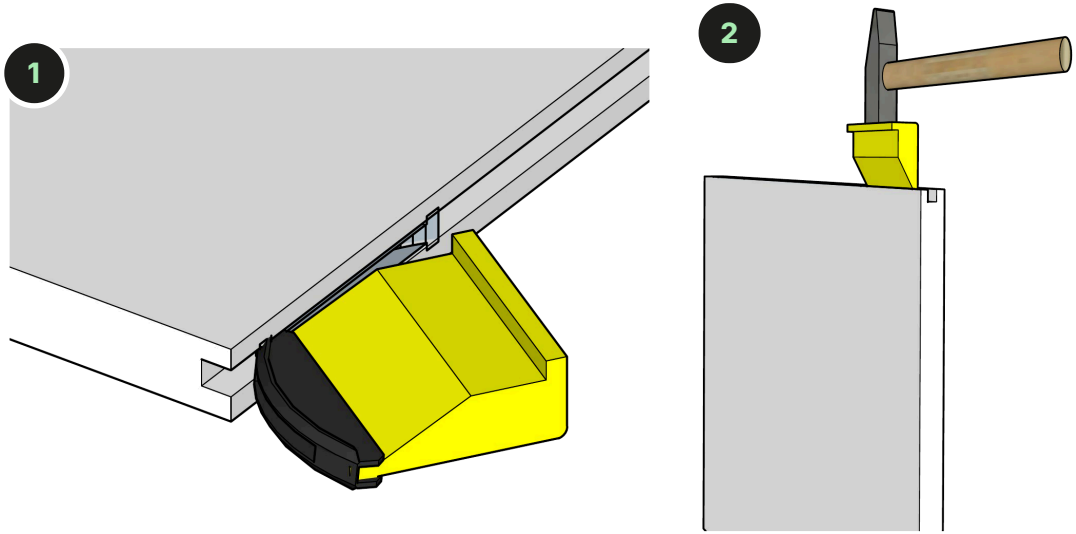

STEP 5


5 Fit the shelves


1. **Lay the cabinet on its back**
   Lay the cabinet down with the back panel on the floor.

2. **Slide in the shelves**
   Slide the shelves over the Divario slides in the side panels.

3. **Put the cabinet in place**
   Stand the cabinet up with two people and put the VAX in the right spot in your cabinet layout.

Done! Your VAX is in place. Enjoy your new shelf unit!

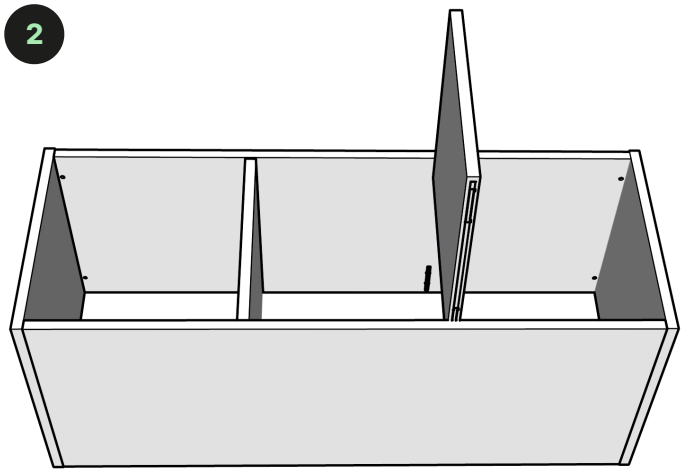

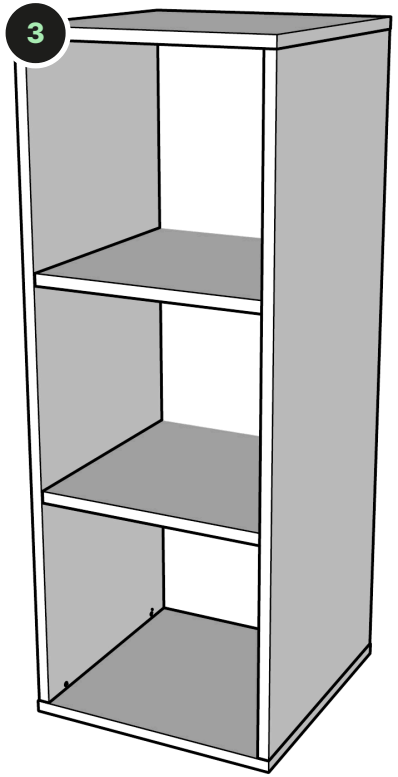

MODIY

BESTÅ VAX Standing